




RPW120HS/RPW130HS

HydroSurge™ Electric Pressure Washer OPERATOR'S MANUAL

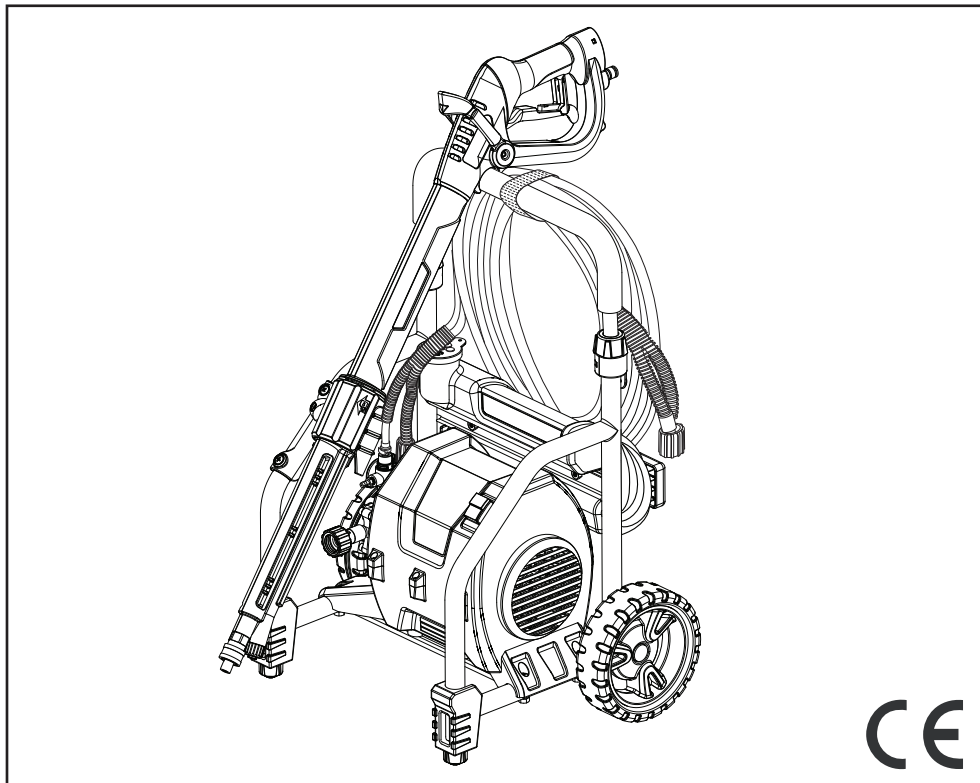

WARNING! To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Thank you for your purchase.

ENGLISH(Original Instructions)

INTENDED USE

- The cleaner is intended only for the cleaning of vehicles, boats, buildings, etc, by the removal of stubborn dirt using clean water and chemical detergents. .
- For domestic use only, not for professional use, and only for operation at temperatures above 0° C .

INTRODUCTION

This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

When using power tools, basic safety precautions should always be taken to reduce the risk of fire, electric shock and personal injury. Also, please read and heed the advice given in the additional safety instructions.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFETY INSTRUCTIONS



WARNING:

Read and understand all instructions. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious personal injury.

- Learn the machine's applications and limitations as well as the specific potential hazards related to this tool by studying this manual. **Follow the maintenance instructions specified in this manual.**
- Never operate the pressure washer with any guard or cover removed or damaged.
- Do not operate the product while under the influence of drugs, alcohol, or any medication.
- Do not wear loose clothing, gloves, neckties, or jewellery. They can get caught and draw you into moving parts. Rubber gloves and non-skid footwear are recommended when working outdoors. Also wear protective hair covering to contain long hair. Wear footwear that will protect your feet and improve your grip on slippery surfaces.
- **Always wear safety glasses with side shields.**
- Don't overreach or stand on unstable support. Keep proper footing and balance at all times.



WARNING:

High pressure jets can be dangerous if subject to misuse. The jet must not be directed at persons, animals, electrical devices, or the machine itself.



WARNING:

When using power tools, basic safety precautions should always be taken to reduce the risk of fire, electric shock and personal injury.



WARNING:

This Appliance has been designed for use with the cleaning agent supplied or recommended by the manufacturer. The use of other cleaning agents or chemicals may adversely affect the safety of the appliance.



WARNING:

Don't use the appliance within range of persons unless they wear protective clothing

- The electric supply connection shall be made by a qualified electrician and comply with IEC60364-1.
 - Only connect this machine only to a supply circuit protected by a residual current device (RCD) with a tripping current of not more than 30mA.
 - Use only extension cords that have watertight connections and are intended for outdoor use. Use only extension cords having an electrical rating not less than the rating of the product. Examine extension cord before using and replace if damaged. Do not abuse extension cord and do not pull on any cord to disconnect. Keep cord away from heat and sharp edges. Always disconnect the extension cord from the receptacle before disconnecting the product from the extension cord.
- Do not direct the jet against yourself or others in order to clean clothes or foot-wear.
- Disconnect from the electrical power supply before carrying out user maintenance.
- To ensure appliance safety, use only original spare parts from the manufacturer or approved by the manufacturer.
- Do not use the appliance if a supply cord or important parts of the appliance are damaged, e.g. safety devices, high pressure hoses, trigger gun.

If an extension cord is used, the plug and socket must be of watertight construction



WARNING:

Inadequate extension cords can be dangerous.

ENGLISH(Original Instructions)



WARNING:

To reduce the risk of electrocution, keep all connections dry and off the ground. Do not touch plug with wet hands.

- To reduce the risk of injury, High pressure cleaners shall not be used by children or untrained personnel. keep children and visitors away. All visitors should wear safety glasses and be kept a safe distance from work area.
- Use correct product. Don't force product or attachment to do a job it was not designed for. Don't use it for a purpose not intended.
- Use only recommended accessories. The use of improper accessories may cause risk of injury.
- Never leave product running unattended. Turn power off. Don't leave product until it comes to a complete stop.
- **Keep the motor free of grass, leaves, or grease** to reduce the chance of a fire hazard.
- Keep product dry, clean, and free from oil and grease. Always use a clean cloth when cleaning. Never use brake fluids, gasoline, petroleum-based products, or any solvents to clean product.
- Check the work area before each use. Remove all objects such as rocks, broken glass, nails, wire, or string which can be thrown or become entangled in the machine.
- Do not use product if switch does not turn it off. Have defective switches replaced by an authorized service centre.
- Avoid dangerous environments. Don't expose to rain. Keep work area well lit.
- Do not abuse the cord. Never use the cord to carry the product or to disconnect the plug from an outlet. Keep cord away from heat, oil, sharp edges, or moving parts. Replace damaged cords immediately. Damaged cords increase the risk of electric shock.
- **Inspect extension cords periodically and replace if damaged.** Keep handles dry, clean, and free from oil or grease.
- **Before starting any cleaning operation**, close doors and windows. Clear the area to be cleaned of debris, toys, outdoor furniture, or other objects that could create a hazard.
- Do not use acids, alkalines, solvents, flammable material, bleaches, or industrial grade solutions in this product. These products can cause physical injuries to the operator and irreversible damage to the machine.
- Keep the motor away from flammables and other hazardous materials.
- Check bolts and nuts for looseness before each use. A loose bolt or nut may cause serious motor problems.

- **Before storing**, allow the motor to cool.
- When servicing use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.
- **ONLY** use cold water.
- Make sure minimum clearance of 1 metre is maintained from combustible materials.
- **Connect pressure washer only to an individual branch circuit.**
- **Hold the gun and lance securely with both hands.** Expect the gun to move when the trigger is pulled due to reaction forces. Failure to do so could cause loss of control and injury to yourself and others.
- Save these instructions. Refer to them frequently and use them to instruct other users. If you lend someone this product, lend them these instructions also.













WARNING:

High pressure hoses, fittings and couplings are important for the safety of the appliance. Use only hoses, fittings and couplings recommended by the manufacturer.

ENGLISH(Original Instructions)




SYMBOLS

Some of the following symbols may be used on this product. Please study them and learn their meaning. Proper interpretation of these symbols will allow you to operate the product better and safer.

SYMBOL	NAME	DESIGNATION/EXPLANATION
	Safety Alert	Indicates a potential personal injury hazard.
V	Volts	Voltage
A	Amperes	Current
Hz	Hertz	Frequency (cycles per second)
W	Watt	Power
min	Minutes	Time
~	Alternating Current	Type of current
no	No Load Speed	Rotational speed, at no load
	Class II Construction	Double-insulated construction
.../min	Per Minute	Revolutions, strokes, surface speed, orbits etc., per minute
	Wet Conditions Alert	Do not expose to rain or use in damp locations.
	Read The Operator's Manual	To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Eye Protection	Always wear safety goggles or safety glasses with side shields and, as necessary, a full face shield when operating this product.
	Risk of Injection	To reduce the risk of injection or injury, never direct a water stream towards people or pets or place any body part in the stream. Leaking hoses and fittings are also capable of causing injection injury. Do not hold hoses or fittings.
	Kickback	To reduce the risk of injury from kickback, hold the spray lance securely with both hands when the machine is on.
	Electric Shock	Failure to use in dry conditions and to observe safe practices can result in electric shock.
	Risk of Explosion	Fuel and its vapours are explosive and can cause severe burns or death.
	Risk of injury	Warning! Never point the gun to human, animals, the machine body, power supply or any electric appliances

ENGLISH(Original Instructions)

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	SIGNAL	MEANING
	DANGER:	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	WARNING:	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	CAUTION:	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	CAUTION:	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to the nearest AUTHORIZED SERVICE CENTRE for repair. When servicing, use only identical replacement parts.



WARNING:

To avoid serious personal injury, do not attempt to use this product until you read thoroughly and understand completely the operator's manual. If you do not understand the warnings and instructions in the operator's manual, do not use this product. Call Ryobi customer service for assistance.



WARNING:

The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles or safety glasses with side shields and, when needed, a full face shield.

SAVE THESE INSTRUCTIONS

ELECTRICAL

ELECTRICAL CONNECTION

This product has a precision-built electric motor. It should be connected to a **power supply that is 230-240 volts, 50 Hz, AC only (normal household current)**. Do not operate this product on direct current (DC). A substantial voltage drop will cause a loss of power and the motor will overheat. If the product does not operate when plugged into an outlet, double-check the power supply.

EXTENSION CORDS

See Figure 1.

The cross-section of any extension cables used must be proportional to their length, i.e. the longer the extension cable, the greater the cross-section; cables with a protection level of "IPX5" must be used.

Use the chart to determine the minimum wire size required in an extension cord.

Motor	Voltage	Extension cable up to 25m	Extension cable up to 50m
	230-240v	section 3 x 1.5mm ²	section 3 x 2.5mm ²



WARNING:

Keep the extension cord clear of the working area. Position the cord so that it will not get caught on lumber, tools, or other obstructions while you are working with a power tool. Failure to do so can result in serious personal injury.



WARNING:

Check extension cords before each use. If damaged replace immediately. Never use the product with a damaged cord since touching the damaged area could cause electrical shock resulting in serious injury.

ENGLISH(Original Instructions)

PRODUCT SPECIFICATIONS

PRODUCT SPECIFICATIONS

High Pressure (RPW120HS)

Rated pressure.....	11 Mpa
Permissible Pressure.....	12 Mpa
Maximum Water Flow.....	5.3 l/min

Low Pressure (High Flow)

Permissible Pressure.....	up to 0.7 Mpa
Maximum Water Flow.....	up to 9.5 l/min
Input.....	230-240 V, 50 Hz, AC only, 1700W

High Pressure (RPW130HS)

Rated pressure.....	12 Mpa
Permissible Pressure.....	13 Mpa
Maximum Water Flow.....	6 l/min

Low Pressure (High Flow)

Permissible Pressure.....	up to 0.7 Mpa
Maximum Water Flow.....	up to 9.5 l/min
Input.....	230-240 V, 50 Hz, AC only, 1800W

Protection Degree (IEC 60529)	IPX5
Sound pressure level	70 dBA
Sound power level.....	86 dBA
Vibration.....	3.5 m/s ²

DESCRIPTION

Figure 2

1. On/Off switch
2. Nozzle storage
3. Gun/Lance
4. Detergent tank
5. HydroSurge(TM) / detergent lever
6. High pressure trigger lock-out
7. High pressure trigger
8. Hose
9. Telescopic handle
10. Power cord storage

Figure 3

11. Hitch pin
12. Wheel
13. Axle

Figure 4

14. Handle assembly
15. Button
16. Collar

Figure 5

17. Lance connection

18. Locking collar

Figure 6

19. High pressure hose
20. Low pressure hose
21. Latch
22. Hose lock

Figure 7

23. Water intake coupler

Figure 11

24. Detergent dial

Figure 12

25. 0° / 25° Spray nozzle

Figure 14

26. Handle release button

KNOW YOUR PRESSURE WASHER

See Figure 2.

The safe use of this product requires an understanding of the information on the product and in this operator's manual as well as a knowledge of the task you are attempting.

ENGLISH(Original Instructions)

Before using this product, familiarize yourself with all operating features and safety rules.

DETERGENT TANK

Remove the cap from the detergent tank to add detergent to the pressure washer.

HIGH PRESSURE TRIGGER

Depressing this trigger allows you to dispense water at high pressure.

HIGH PRESSURE TRIGGER LOCK-OUT

The trigger lock-out prevents accidental use of the high-pressure trigger.

HYDROSURGE(TM) /LOW PRESSURE (HIGH FLOW) LEVER

Use this lever when you want to rinse with water alone, or apply a combination of water and detergent at low pressure.

ON/OFF SWITCH

This switch turns the pressure washer on and off.

TELESCOPIC HANDLE

Lower the telescopic handle for convenient storage.

GUN/LANCE

The gun/lance features two outlets — one for high pressure spray and one for low pressure (high flow) spray.

ASSEMBLY

UNPACKING

This product requires assembly.

- Carefully cut the box down the sides then remove the product and any accessories from the box.



WARNING:

This new product has been shipped in a partially assembled condition as described below.

If in doubt, call Ryobi Customer Service for assistance. Operation of a product that may have been improperly preassembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.
- If any parts are damaged or missing, please call Ryobi Customer Service for assistance.



WARNING:

If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury.



WARNING:

Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.



WARNING:

Do not connect to power supply until assembly is complete. Failure to comply could result in accidental starting and possible serious personal injury.

INSTALLING THE WHEELS

See Figure 3.

- Locate the axles, hitch pins, and wheels.
 - Slide the axle through the hole in the centre of the wheel.
 - Lift the machine and slide the axle into the wheel mounting hole in the machine base as shown.
 - Push the hitch pin into the hole on the end of the axle to secure the wheel assembly.
- NOTE:** The hitch pin should be pushed into the axle until the centre of the pin rests on top of the axle.
- Repeat with the second wheel.

ATTACHING THE HANDLE ASSEMBLY

See Figure 4.

- Line up the handle assembly with the holes.
- Depress the button on the handle assembly and insert into the holes on the pressure washer. Press down on the handle assembly until the button on the handle clicks into place.
- Lower both collars on the handle and rotate clockwise until secure.

ASSEMBLING THE GUN/LANCE

See Figure 5.

- Push the two ends of the gun/lance together so that the holes inside each end are aligned.
- Lower the locking collar and rotate counter clockwise to tighten securely.

ATTACHING THE HIGH PRESSURE AND LOW PRESSURE HOSES TO THE GUN

See Figure 6.

- The low pressure hose is the clear tube with the

ENGLISH(Original Instructions)

plastic fitting and goes on the spout at the bottom of the gun.

- Grasp the plastic fitting and slide onto the spout until it clicks into place.
- To remove, depress the latch on top of the fitting and remove the hose from the spout.
- The high pressure hose has a metal connection and slides into the opening at the top of the gun.
- Grasp the hose lock and pull outward to clear the way for the high pressure hose to be inserted.
 - Insert the high pressure hose all the way into the hole.
 - Push the hose lock fully back into the handle to hold the high pressure hose in place.

CONNECTING THE GARDEN HOSE TO THE PRESSURE WASHER

See Figure 7.

The water supply must come from a water main. NEVER use hot water or water from ponds, lakes, etc. Before connecting the garden hose to the pressure washer:

- Run water through the garden hose for 30 seconds to clean any debris from the hose.
- Inspect the filter screen in the end of the pressure washer intake.
 - If the filter is damaged, do not use the machine until the screen has been replaced.
 - If the filter is dirty, clean it before connecting the garden hose to the machine.

To connect the garden hose to the pressure washer:

- Uncoil the garden hose.

NOTE: There must be a minimum of 3 metres of unrestricted garden hose between the pressure washer intake and the garden tap.

- With the garden tap turned completely off, attach the end of the garden hose to the coupler on the pressure washer water intake. Tighten by hand. water that has flown through backflow preventers is considered to be non-potable.

OPERATION

Applications

This pressure washer can be used for the purposes listed below:

- Removing dirt and mould from decks, cement patios, and walls.
- Cleaning cars, boats, motorcycles, outdoor furniture and barbeques.

ADDING DETERGENT TO THE PRESSURE WASHER

See Figure 8.

Use only detergents designed for pressure washers; household detergents, acids, alkalines, bleaches, solvents, flammable material, or industrial grade solutions can damage the pump. Many detergents may require mixing prior to use.

Prepare cleaning solution as instructed on the solution bottle.

- Disconnect pressure washer from power supply.
- Place pressure washer upright on a flat surface.
- Remove cap from detergent tank.
- Pour detergent into tank until it reaches the maximum fill level located on the unit.

NOTE: Use a funnel, if needed, to prevent accidental spilling of the detergent outside the tank. If any detergent is spilled during the filling process, make sure the unit is cleaned and dried before proceeding.

- Reinstall cap.

STARTING AND STOPPING THE PRESSURE WASHER

See Figure 9.

CAUTION:

 Do not run the pump without the water supply connected and turned on.

- Connect the garden hose.
- Turn the garden hose on then squeeze the high pressure trigger to relieve air pressure. Once a steady stream of water appears, release the trigger.
- After ensuring the switch is in the OFF position, connect the pressure washer to the power supply.
- Press **ON (I)** on the switch to start the motor.
- To stop the motor, release the trigger and press **OFF (O)** on the switch.

USING THE GUN/LANCE

See Figures 10 - 11.

For the most effective cleaning, the spray nozzle should be between 20cm and 60cm from the surface to be cleaned. If the spray is too close it can damage the cleaning surface.

NOTE: For greater control and safety, keep both hands on the unit at all times.

Several different methods of cleaning are available. Choose the method best suited for your cleaning project.

High Pressure Cleaning:

Squeeze the high pressure trigger on the gun. This will provide a spray of water at high pressure.

When using the high pressure spray alone, detergent is not dispensed.

ENGLISH(Original Instructions)

Low Pressure (High Flow) Rinsing:

Move the low pressure (high flow) lever on top of the trigger handle forward. This will provide a spray of water at low pressure.

NOTE: When using low pressure (high flow) rinsing only, engage the high pressure trigger lock-out to prevent accidental depressing of the high pressure trigger.

- To dispense soap, turn the detergent dial to the ON position.
- To revert back to water only rinsing at low pressure, turn the detergent dial to OFF.

Combination Cleaning/Rinsing:

To clean AND rinse the area with water at the same time (for instance, in a heavily soiled area), move the low pressure (high flow) lever forward and depress the high pressure trigger.

- To dispense detergent when using this combination, turn the detergent dial to the ON position.
- To rinse with no detergent using this combination, turn the detergent dial to OFF.

NOTE: Any cleaning or rinsing method using high pressure spray requires that the on/off switch be in the ON position.

For methods using low pressure only, the switch may be in either the ON or OFF position.

USING THE NOZZLES

See Figure 12.

Before starting any cleaning job, determine the best nozzle for the job. The 25° nozzle is for general purpose or large surfaces. The 0° nozzle delivers a fine, powerful jet used for spot cleaning or high-to-reach areas.



CAUTION:

NEVER change nozzles without engaging the lock out on the gun and NEVER point the lance at your face or at others. The Quick Connect collar contains small springs that could eject the nozzle with some force. Failure to heed this may cause personal injury.

Using the Quick Connect collar, changing nozzles is easy.

To connect a nozzle to the lance:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pulling down on the lock out until it clicks into the slot.
- Push the nozzle into the Quick Connect collar until it clicks in place and is secured properly.

To disconnect a nozzle from the lance once the cleaning job is complete:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock out on the gun by pushing down on the lock out until it clicks into the slot.
- Remove the nozzle by placing hand over nozzle then pulling back the Quick Connect collar. Place nozzle in the nozzle storage area .

To disconnect a nozzle from the trigger handle once the cleaning job is complete:

- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.
- Engage the lock-out on the trigger handle by pushing up on the lock-out until it clicks into the slot.
- Remove the nozzle by placing hand over nozzle then pulling back the quick-connect collar. Place nozzle in the nozzle storage area .

OPERATING THE PRESSURE WASHER

See Figures 13.

To clean:

- Place the detergent dial in the ON position.
- Start the pressure washer and spray the detergent on a dry surface using long, even, overlapping strokes. To prevent streaking, do not allow detergent to dry on the surface.
- Engage the high pressure trigger to clean the area.
- Use a combination of high and low pressure (high flow) for heavily soiled areas where constant flushing is desired.

NOTE: When using either high pressure or a combination of high and low pressure (high flow), test a small area first to avoid surface damage.

To rinse:

- Turn the detergent dial to the OFF position.
- Spray away from the rinsing surface for approximately 10 seconds to allow any remaining detergent to be flushed from the hose.
- Start at the top of the area to be rinsed and work down, overlapping the strokes.

STORING THE PRESSURE WASHER

See Figure 14.

Store in a dry, covered, frost-free area where the weather can't damage it. Always empty water from gun, hose and pump.

Depress the telescopic handle release button. This will allow the handle to retract. If the handle does not lower on its own, apply a light pressure to push the handle down.

NOTE: Do not loosen the locking collar when retracting or extending the handle.

ENGLISH(Original Instructions)

- When the pressure washer is needed again, depress and hold the handle release button while pulling up on the handle to restore it to normal operating position.

NOTE:

The use of a pump protector is recommended to prevent cold weather damage during storage over the winter months.

MAINTENANCE



WARNING:

When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage.



WARNING:

Before inspecting, cleaning, or servicing the machine, shut off motor, wait for all moving parts to stop, and disconnect plug from power source. Failure to follow these instructions can result in serious personal injury or property damage.

GENERAL MAINTENANCE

Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.



WARNING:

Do not at any time let brake fluids, petrol, petroleum based products, penetrating oils, etc., come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury. Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at an authorized service centre.

POWER SUPPLY CORD REPLACEMENT

If replacement of the power supply cord is necessary, this must be done by an authorized service centre in order to avoid a safety hazard.

NOZZLE MAINTENANCE

Excessive pump pressure (a pulsing sensation felt while squeezing the trigger) may be the result of a clogged or dirty nozzle.

- Unplug the pressure washer.
- Turn off the pressure washer and shut off the water supply. Pull trigger to release water pressure.

- Remove the nozzle from the lance.

NOTE: Never point the spray lance at your face.

- Using a straightened paper clip or nozzle cleaning tool, free any foreign materials clogging or restricting the nozzle.
- Using a garden hose, clear/flush debris out of nozzle.
- Reconnect the nozzle to the lance.
- Turn on the water supply.

ENGLISH(Original Instructions)

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pressure washer does not start when trigger is depressed	Power cord not connected to power source Switch is off House circuit breaker is tripped	Connect the power cord to a live 220-240V AC, 50 Hz AC plug. Turn switch on. Reset house breaker. Make sure pressure washer is connected to an individual branch circuit only. If using an extension cord, make sure it is heavy enough to carry the current of the pressure washer.
Pump doesn't produce pressure	Inadequate water supply Spray lance leaks Nozzle is clogged Pump is faulty Air in line Water inlet filter is clogged or dirty	Provide adequate water flow. Check connections and / or replace lance. Clean nozzle. Contact authorized service centre. Squeeze trigger on gun to remove air from line. Remove the water inlet filter, rinse with warm water, then replace in unit.
Machine doesn't reach high pressure	Diameter of garden hose is too small Water supply is restricted Not enough inlet water	Replace with 12mm garden hose. Check garden hose for kinks, leaks, and blockages. Open water source full force.
No detergent	Detergent tank is empty The detergent dial is not completely in the ON position Water supply is inadequate or clogged	Add additional detergent to tank. Turn the detergent dial fully to the ON position. Check garden hose for kinks, leaks and blockages.

DISPOSAL



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



LIMITED WARRANTY

TTI warrants this outdoor product to be free of defects in material and workmanship for 24 months from the date of purchase by the original purchaser, subject to the limitations below. Please keep your invoice as proof of date of purchase.

This warranty is only applicable where the product is used for personal and non-commercial purposes. This warranty does not cover damage or liability caused by / due to misuse, abuse, accidental or intentional acts by user, improper handling, unreasonable use, negligence, failure by end user to follow operating procedures outlined in the user's manual, attempted repair by non-qualified professional, unauthorised repair, modification, or use of accessories and/or attachments not specifically recommended by authorised party. Please see your local dealer for list of authorised service centres in your area.

This warranty does not cover belts, brushes, bags, bulbs or any part which ordinary wear and tear results in required replacement during warranty period. This warranty does not cover transportation cost or consumable items such as fuses and batteries.

This limited warranty is void if the product's original identification (trade mark, serial number, etc.) markings have been defaced, altered or removed or if product is not purchased from an authorised reseller or if product is sold AS IS and / or WITH ALL FAULTS.

Where permitted, the provisions of this limited warranty are in lieu of any other written warranty, whether express or implied, written or oral, including any warranty of MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WE BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INCIDENTAL DAMAGES. OUR MAXIMUM LIABILITY SHALL NOT EXCEED THE ACTUAL PURCHASE PRICE PAID BY YOU FOR THE PRODUCT.

This warranty is valid only in the European Union, Australia and New Zealand. Outside these areas, please contact your authorised Ryobi dealer to determine if another warranty applies.



ECLARATION OF CONFORMITY

We declare on own responsibility that this product conforms to the following standards or standardizing documentation :
- 98/37/EC (Machinery-Directive) **before December 29, 2009, 98/37/EC (Machinery-Directive) before December 29, 2009, 2006/42/EC (Machinery-Directive) from 29 December 2009**

- 2006/95/EC (LVD-Directive),
- 2004/108/EC (EMC-Directive), and
- 2000/14/EC (noise directive) incl. modifications.

For the relevant implementation of the safety and health requirements mentioned in the Directives, the following standards and/or technical specification(s) have been respected:

EN60335-2-79 ,EN60335-1, EN62233, EN55014-1, EN55014-2 , EN61000-3-3, ENISO 3744

	RPW120HS	RPW130HS
Measured Sound Power Level	83.19 dB (A)	83.19 dB (A)
Guaranteed Sound Power Level	86 (A)	86 dB (A)
Date of issuance		09 / 2009

Technical documents are kept by Homelite Far East Co., Ltd. 24/F, 388 Castle Peak Road, Tsuen Wan, N.T., Hong Kong.

Declared in Sep 2009 by Homelite Far East Co., Ltd.



TECHTRONIC INDUSTRIES EMEA

Medina House, Fieldhouse Lane, Marlow,
Buckinghamshire,
SL7 1TB, UNITED KINGDOM

RYOBI TECHNOLOGIES (UK) LIMITED.

Medina House,
Fieldhouse Lane, Marlow,
Buckinghamshire,
SL7 1TB,
UNITED KINGDOM
Tel: + 44 (0) 1628 894400
Fax: + 44 (0) 1628 894401
Technical Helpline : + 44 (0) 800 389 0305

TECHTRONIC INDUSTRIES FRANCE SAS

Immeuble Le Grand Roissy
Z.A. du Gué - 35 rue de Guivry
77990 LE MESNIL AMELOT FRANCE
Phone: + 33(0)1 60 94 69 70
Fax: + 33(0)1 60 94 69 79

RYOBI BELGIUM

Avenue des Pâquerettes, 55
Zoning artisanal - bâtiment 5
B - 1410 Waterloo
BELGIQUE
Tel : + 32(0) 2357 8140
Fax : + 32(0) 2357 8149

TTI ITALIA SRL

Via Fratelli Gracchi, 39
20092 Cinisello Balsamo (MI)
Italia
Tel : + 39(0) 5923 8408
Fax : + 39(0) 5924 6960

TECHTRONIC INDUSTRIES IBERIA S.L

Av. De la Industria,52
Coslada – Madrid – España
Tel: 91 485 12 10

TECHTRONIC INDUSTRIES SOUTH AFRICA

CO. (PTY) LTD
P.O Box 83888, South Hills, Johannesburg, 2136
South Africa

TECHTRONIC INDUSTRIES (ASIA) CO., LTD.

24/F, CDW Building,
388 Castle Peak Road,
Tsuen Wan, Hong Kong.
Tel : + 852 2402 6888

RYOBI TECHNOLOGIES GMBH

Itterpark 4
D-40724 Hilden
DEUTSCHLAND
Tel: + 49 (0) 2103 2958-0
Fax: + 49 (0) 2103 2958-29

RYOBI TECHNOLOGIES GMBH

Vertriebsbüro Österreich
Schinitzgasse 13
A-8605 Kapfenberg
Tel.: + 43 (0) 3862 23590-0
Fax: + 43 (0) 3862 23590-25

TECHTRONIC INDUSTRIES AUSTRALIA PTY LIMITED.

Building B, Rosehill Industrial Estate,
3 Shirley Street,
Rosehill NSW 2142
AUSTRALIA
Tel: (02) 8892 1800 or 1300 361 505
Fax: 1800 807 993

TECHTRONIC INDUSTRIES (NZ) LIMITED.

27 Clemow Drive, Mt Wellington
PO Box 12-806, Penrose, Auckland
NEW ZEALAND
Tel: + 64 (0) 9 573 0230
Free Call: +64 0800 279 624
Fax: + 64 (0) 9 573 0231

A&M MIDDLE EAST FZCO

P.O.Box 61254
Jedel Ali, Dubai,
UNITED ARAB EMIRATES
Tel.: + 9714 8861399
Fax: + 9714 8861400

TECHTRONIC INDUSTRIES DENMARK APS

Stamholmen 147, 4.
DK-2650 Hvidovre
Denmark
Tlf 43 56 55 55, Fax 43 56 55 56
E-mail: kundeservice@tti-emea.com

TECHTRONIC INDUSTRIES NORWAY AS

Tlf.: 800 12 493, Faks: 800 12 492
E-mail: kundetjeneste@tti-emea.com


TECHTRONIC INDUSTRIES SWEDEN AB

Tel (+46) 08 24 60 30. fax (+46) 08 24 60 31.
E-mail: kundtjanst@tti-emea.com

TECHTRONIC INDUSTRIES FINLAND OY

Tel. 0800 1 09000, Fax 0800 1 09001
Email: asiakaspalvelu@tti-emea.com

Machine: **Electric Pressure Washer**
Name of company: Homelite Far East Co., Ltd.
Address: 24/F, CDW Building,
388 Castle Peak Road,
Tsuen Wan, Hong Kong.

Type: **RPW120HS / RPW130HS**
Name / title: Andrew Eyre
Vice President, Engineering
Signature: 

09 / 2009